



## USER GUIDE

### CONTENTS:-

1. Unlock/Lock procedure
  - 1.1. Using Key
  - 1.2. Using Pin Pad
  
2. Reset Pin Number
  
3. Categories

# Unlock/Lock Procedure

---

There are 3 steps for opening with the key:

1. Put in the little key located on the right and turn it anti clockwise.



2. Turn the cross thread key located on the left and turn it clock wise.



3. Turn the silver handle to the left.



**OR**

**You can use the key pad procedure:-**

1. Put in correct pin number.



2. Turn the cross thread key located on the left and turn it clock wise.



3. Turn the silver handle to the left.



**TO LOCK THE SAFE:**

1. Turn the silver handle to 6 o' clock position.



2. Turn the cross thread key back to the 12 o' clock position.



3. Turn the little key on the right back to the 12 o' clock position.

# **RESETING THE PIN NUMBER:**

## **OPERATING INSTRUCTIONS**

### **1 . OPENING THE SAFE**

Your pin code is 159A the code has already been set for you. You can reset this code by following the below instructions.

To open the safe for the first, remove the small plastic cover ("B", see diagram) on the front panel, insert the key into the key hole and turn it clockwise direction, at the same time, turn the doorknob ("A", see diagram) clockwise direction , and then turn the handle ("C", see diagram) in a clockwise direction to open the safe . Please ensure that you use the correct key as they are security coded and have little numbers engraved on them these numbers match up to the lock numbers.

### **2. INSTALLING THE BATTERIES**

The safe requires 4 x size "AA", (1.5V) batteries.

Open the safe, push the battery cover plate "D"(see diagram) on the back of the door and install the batteries. Ensuring the batteries and fitted with the correct corresponding polarity.

Use of alkaline batteries is recommended.

### 3. PROGRAMMING THE CODE

A. With the safe door open, press the red button "E" (see diagram) on the back of the door near the hinge, release it and you will hear two beeps. The yellow light will be on at the same time.

B. Now press from 3 to 8 numbers that you wish to use as a combination, and confirm by pressing the letter "A" or "B" within 15 seconds. The safe "bleeps" twice and the yellow light will go off, your personal code is now set.

C. Write down your new combination immediately and check whether your new combination has been programmed or not on conditions of the safe door open.

D. Factory Default Code is **159A**.

### 4. USING YOUR SAFE

To open the safe, enter your personal code followed by the letter "A" or "B", you will hear a beep and the green light will be on, then turn the doorknob in clockwise direction, and then turn the handle in clockwise direction to open the door within 5 seconds.

If you or an intruder uses the incorrect group of numbers, it will not open. If the incorrect combination is used 3 times consecutively, you must wait for 20 second before reattempting access.

### 5. BATTERY REPLACEMENT WEARING

If the batteries are low, the red light (in the middle of the number panel ) will warn you immediately. To test the batteries, just input your personal numbers to open the door. If the batteries are low, the red light will be on. If nothing happens, it means that the batteries are in order.

## **6. REPLACING THE BATTERIES**

The safe requires 4 x size "AA" (1.5v) batteries.

Open the safe, push the battery cover plate "D"(see diagram) on the back of the door and replace the 4PCS old batteries, you must reprogram the code, using the above third step. Use of alkaline batteries is recommended.

## **7. OVERRIDE INSTRUCTION TO OPEN THE SAFE**

For your convenience, we have engineered a manual override system for your safe. If you forget or misplace your combination, remove the small central plate on the front panel ("B", see in diagram), insert the key into the key hole and turn it counter-clockwise direction, at the same time, turn the doorknob ("A", see diagram) clockwise direction, and then turn the handle ("C", see diagram) in a clockwise direction to open the safe.

This will manually open your safe at any time.


## **8. CLOSING THE SAFE**

First, turn the handle in an anticlockwise direction, and then turn the knob still in an anticlockwise direction. That will close the safe.

## 9. INSTALLING THE SAFE

To reduce the risk of theft of the safe, it can be secured to floor, wall or in a cupboard. For your convenience, there are holes (diameter 8mm) on the back and in the bottom; therefore it can be fixed by the expansion bolts.

**CAUTION:** The safe should be placed vertically when installing the safe.

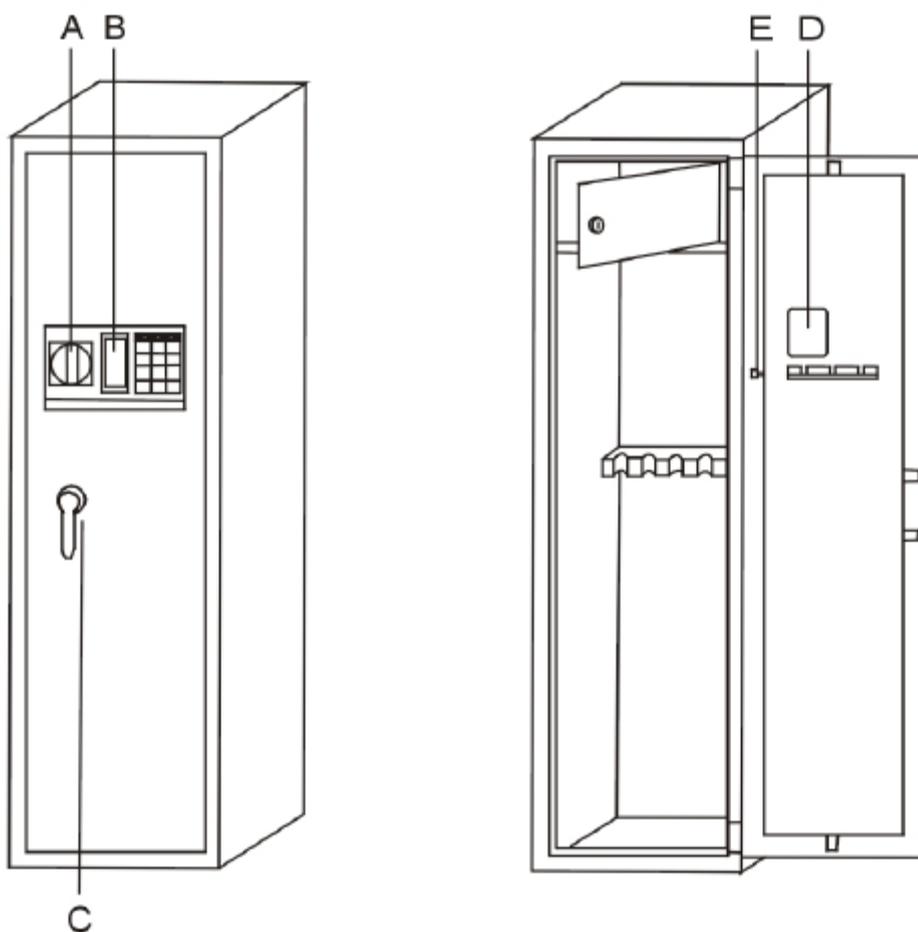

**PLEASE NOTE:** To reset the gun safe keypad code. The instructions ask you to press a red button. The red button is located on the inside of the safe, on the inside edge of the door half way down. See above diagram "E".

# **CATEGORIES:**

**Victoria:**

**Categories A, B, C, D, E & H Compliant:**

[http://www.police.vic.gov.au/content.asp?Document\\_ID=175](http://www.police.vic.gov.au/content.asp?Document_ID=175)

**Categories A & B Compliant:**

See Page 10:

[http://www.police.vic.gov.au/retrievemedias.asp?media\\_id=35344&status=active](http://www.police.vic.gov.au/retrievemedias.asp?media_id=35344&status=active)

**Categories C, D & E Compliant:**

See Page 10:

[http://www.police.vic.gov.au/retrievemedias.asp?media\\_id=48718&status=active](http://www.police.vic.gov.au/retrievemedias.asp?media_id=48718&status=active)

**Categories H Compliant:**

See Page 9:

[http://www.police.vic.gov.au/retrievemedias.asp?media\\_id=35349&status=active](http://www.police.vic.gov.au/retrievemedias.asp?media_id=35349&status=active)

**NSW:**

Categories A & B:

[http://www.police.nsw.gov.au/community\\_issues/firearms/safe\\_storage](http://www.police.nsw.gov.au/community_issues/firearms/safe_storage)

**ACT:**

Categories A, B, C, D & H Compliant:

<http://www.police.act.gov.au/community-safety/firearms/firearms-storage.aspx>

**QLD:**

Categories A, B, C, D, H & R Compliant:

See Section 60, Page 50:

<http://www.legislation.qld.gov.au/LEGISLTN/CURRENT/W/WaponsR96.pdf>

**TAS:**

Categories A, B, C, D & H Compliant:

<http://www.police.tas.gov.au/services-online/firearms/firearms-storage/>

**S.A.:**

Categories A, B, C, D & H Compliant:

Part 6, Section 38, Page 22:

<http://www.legislation.sa.gov.au/lz/c/r/firearms%20regulations%202008/current/2008.239.un.pdf>

**W.A.:**

Categories A, B, C, D & H:

<http://www.police.wa.gov.au/Ourservices/Firearms/Requirements/Storage/tabid/1626/Default.aspx>

**N.T.:**

Categories A & B:

Also Categories C, D & H in some cases also (Subject to individual inspection and approval):

<http://www.nt.gov.au/pfes/index.cfm?fuseaction=page&p=160>